



Know your machine from every angle.

**Shaft Alignment** 

**XT770** 









# **HIGHLIGHTS**

### **MAXIMUM FLEXIBILITY**



#### **ALL XT PROGRAMS IN ONE FREE APP**

All XT measurement programs included in one straightforward application available for free.



#### **DISPLAY DATA ON MULTIPLE PLATFORMS**

Functionality for iOS, Android and Easy-Laser® XT display units.



#### **NO LOCK-INS**

Buy with or without the user-friendly Easy-Laser® XT12 display unit.



#### **MAXIMUM FLEXIBILITY**

Combine several measuring units with the display unit of your choice, or use different display units with one set of measuring units.

No license hassle!



#### **RUGGED DESIGN**

The XT products are rugged, rated both IP66 and IP67 water and dust proof. For superior durability in harsh environments.



#### LONG OPERATING TIMES

The long operating times of up to 16 hours for the display unit and 24 hours for the measuring units mean even the toughest jobs will be finished on time with no interruptions.



#### **SEND THE REPORTS**

Share the reports via email. Possible on all platforms.

### **RUGGED DESIGN**



### **IP66 AND IP67 APPROVED**

Easy-Laser® XT measuring units and display unit are waterproof, dustproof and shockproof. The units have been tested and approved to an Ingress Protection rating of IP66 and IP67, which means that they are dustproof and waterproof to a depth of 1 metre, and also protected against powerful water jets.






# THIS IS EASY ALIGNMENT


#### HORIZONTAL PROGRAM

The user interface is intuitive and guides you through the measurement process. It is animated and zooms in to the relevant element for each step. You can save the measurements

of a machine for As found and As left in the same file.

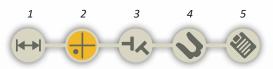


The interactive workflow indicator lets you easily jump to any part in the measurement process.

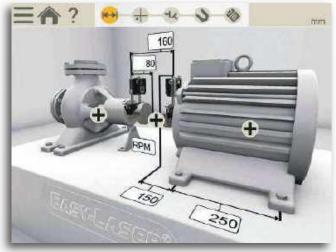

1. Enter dimensions




2. Measure (Five methods available, explained to the right)

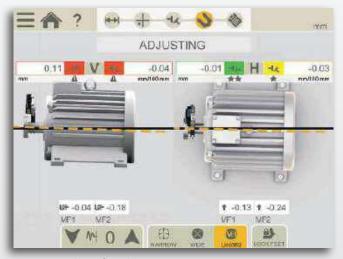

- 3. View result, As found
- 4. Adjust



5. View report as it will look

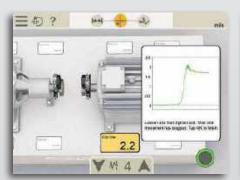

Soft Foot check on both machines



Tolerance check (pre-set or custom)




Quality check view for measurements

# **MEASUREMENT METHODS**

Measuring points






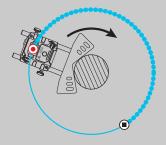


#### **CONTINUOUS SWEEP**

Automatic recording of measurement values during continuous sweeping of the shaft. The easiest and quickest way to obtain the alignment status on coupled machines. Hundreds of points are registered. Start recording, rotate, and stop at any angle and you get the results instantly. Quality check of measurement is provided (see example down left).

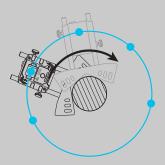


#### **UNCOUPLED SWEEP**

Used when the machines are uncoupled and when the rotation can be difficult to control. Rotate one shaft/unit at a time to pass with the beam over the other (stationary). Repeat alternately until enough measurement points are recorded. You can start and stop anywhere on the turn. Use it for big heavy machinery like gas turbines, wind turbines or gear boxes which can be difficult to rotate to a specific position.

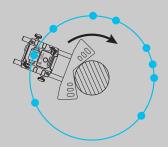


#### **MULTI POINT**

Multi point is basically the same as EasyTurn™, but instead you can record multiple points on the sector rotated. This will provide an optimized calculation basis. Perfect for e.g. turbine and sliding bearing applications.

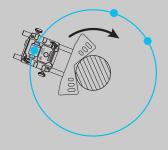

#### **EASYTURN**

Ideal method for coupled machines where you manually rotate the shafts to any position. The EasyTurn™ function allows you to begin the measurement process from anywhere on the turn. You can turn the shaft to any three positions with as little as 20° between each position to register the measurement values. An easier-to-use version of the three-point method (see 9–12–3).

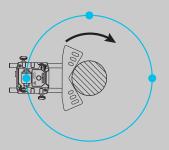

#### 9-12-3

Measurement points are recorded at fixed points 9, 12 and 3 o'clock. This is the classic three-point method which can be used in most cases. The preferred method for situations where the machine to be aligned is mounted on a moving object, and it is not possible to use the inclinometers (e.g., on ships, cranes, wind turbines etc.)

# **SMART FUNCTIONS**



#### **THERMAL GROWTH**

Automatically compensate for thermal expansion of the machines.



### **SWAP VIEW**

Understand adjustment directions more intuitively.



#### **CONTINUE SESSION**

Your latest measurement is always available, automatically saved.



#### **TEMPLATES**

Save measurement files as templates, with machine data and settings, to quickly start measurements.



#### **MEASUREMENT VALUE FILTER**

Improve readings when measuring conditions are poor.



#### **MULTIPLE SETS OF FEET**

Align machines with more than two pairs of feet.



#### **LOCKED FEET**

Lock any pair of feet on the machine. Used when aligning base-bound or bolt-bound machines.



#### WIDE LIVE ADJUSTMENT

Adjust with live values using expanded sensor position ranges in the H and V position



#### **360° LIVE ADJUSTMENT**

Adjust both vertically and horizontally at the same time with measuring units in any position.



#### **SELECT COUPLING TYPE**

Choose method depending on coupling type: short flex, spacer shaft.



#### **SELECT MACHINE IMAGE**

Choose from different 3D machines to portray your machinery on either side of coupling.



### **ADJUSTMENT GUIDE**

The adjustment guide helps you decide optimum adjustment by simulating shimming and move. For programs Horizontal and Machine train.



#### **BUILT-IN HELP**

The app includes a searchable *Users Manual* which opens the relevant chapter depending where in the process you are. This makes it quick and easy to find the answer to your user questions.













































Customize your machine set up in Machine Train and Horizontal programs with corresponding 3D machine icons.



# **DOCUMENTATION**

### SAVE!



#### **INTERNAL MEMORY**

Save your measurement files, photos and reports to the internal memory.



#### **VERSATILE FILE TYPES**

Both a PDF and an Excel file are generated.



#### **READ QR AND BAR CODES**

Assign a specific code to a specific machine, then use the built-in camera of your device to open assigned file and settings.

(Note: camera resolution requirements applicable.)





#### **PDF REPORT TEMPLATES**

Use one of the two formats included.



#### **ADD NOTES**

Explain it a little more.



#### SIGN REPORTS ELECTRONICALLY

Sign-on screen to verify your job. Signature is saved with the PDF file.



#### **ADD PHOTO**

Show what you mean.



#### **ADD THERMAL IMAGE**

See the difference after alignment. (Available only with XT12 Part No. 12-1292)



### SHARE!



#### **SEND THE REPORTS**

Share the reports via email. Possible on all platforms.



#### **SAVE TO USB**

Save your files to USB stick and copy to other devices.








# **MORE POSSIBILITIES**



### **VERTICAL/FLANGE MOUNTED MACHINES**



For measurement and alignment of vertically and flange mounted machines. Handles machines with 4, 6, 8 and 10 bolts.

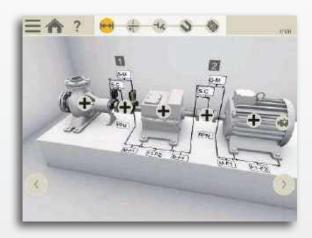

#### **MACHINE TRAIN**



Build your own machine train without limits. You can pick the reference machine manually, or let the program choose one that will minimize the need for adjustments.



#### **CARDAN/OFFSET MOUNTED MACHINES**




For alignment of cardan/offset mounted machinery. (Requires additional Cardan bracket Kit.)



#### TWIST MEASUREMENT OF MACHINE BASE




The twist measurement program allows you to check the flatness or twist of the machine foundation using only the measuring units in the system.

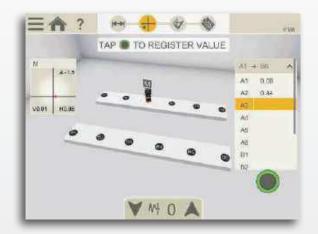

#### **BASIC FLATNESS**




With this program you can check the flatness of foundations and frames, using two rows of points, 2 to 8 points per row. (Requires XT20 or XT22).

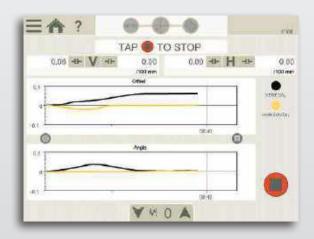

#### **EASYTREND**




With EasyTrend you can keep track of machine movement over time. For example, you can check for thermal expansion and pipe strain issues. (Requires additional DM-brackets.)

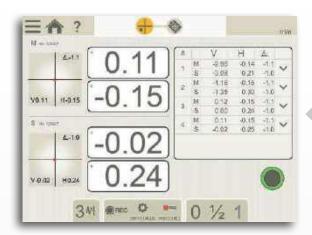

#### **VALUES – DIGITAL DIAL INDICATOR**



With the Values program you measure as with dial gauges, but with laser precision and the possibility to document the measurement result.

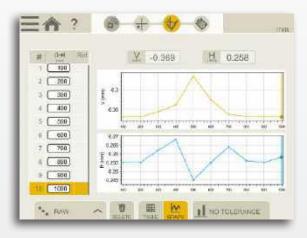

#### **STRAIGHTNESS**



With our program for measuring straightness, you can easily measure long shafts, rolls, bearing journals, bases, overhead rails, machine structures etc. You will be

able to get the result for both the horizontal and vertical alignment, graphically as well as digitally. The program automatically calculates different Best-fit results. (Requires XT24, XT20 or XT22).


#### **BORE CENTER**



Use this program to measure the straightness of bore center line, bearing journals and other cylindrical objects. Measure 3–50 points at each position (Multipoint).

If required, you can set tolerances. The result can be displayed as Best-fit calculated. Individual points can be remeasured. (Requires XT Bore bracket kit).

# **VERSATILITY**

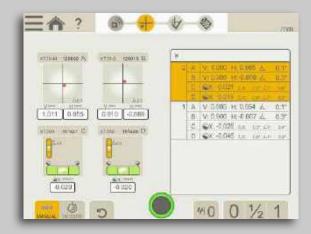


#### **COMBINED DISPLAY**

The Values interface can show up to four units at the same time. It can be both measuring units and digital levels, for example. Automatic recording possible (set the interval and duration). You can make individual notes for each measurement point.



### **CHECK FOR PLAY AND MOVEMENTS**

Mount the M and S units on suitable places, then push/pull the object and check actual machine component play and movements, for example shaft radial play. Laser transmitter XT20/XT22 can also be used.

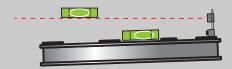

#### **GEOMETRICAL MEASUREMENTS**

Actually, the program can be used for most geometrical measurements (with suitable units and brackets). Perfect for the complete machine installation phase. For example, with the XT20/XT22 laser transmitter you can use the program to level machine foundations, align several objects co-planar etc.



#### **DYNAMIC MEASUREMENT**

Use Values to determine that foundations are rigid enough for the forces applied during running conditions. For measurements where the EasyTrend program is not suitable, or where a laser transmitter should be used instead.

### **MEASURING UNITS**

#### **XT70-M/S MEASURING UNITS**

The XT70 measuring units utilize dot-type laser and 2-axis square PSD surfaces. A state-of-the-art OLED display (D) shows the angle of the unit, making it easier to position it on the shaft.

The diagonally positioned locking knobs securely lock the unit on the rods. Rigid aluminium housing provide maximum stability. IP66 and 67, dust- water- and shockproof. Heavy-duty battery for very long operating times; up to 24 hours. Built-in wireless technology.

#### **SHAFT BRACKET**

The V-bracket is light yet rigid, with two rods for maximum stability in all directions. Pre-mounted chain for quick setup on the machine.



- A. PSD aperture
- B. Laser aperture
- C. Laser angle adjustment
- D. OLED display: battery status/unit angle
- E. Chain tightening knob

- F. Charaer connector
- G. Extendable stainless steel rods
- H. Locking knob
- I. Slidable target/dust cover

#### **DOT-TYPE LASER TECHNOLOGY**



The dot laser technology makes it possible to measure larger machines and longer spans than line laser systems. It also provides higher accuracy when backlash in

the coupling is present. In addition, dot laser allows you to check more things when installing a machine, e.g. twist of foundation and bearing clearance. With 2-axis PSD you can read off and record values for both vertical and horizontal directions.

#### **DUAL LASERS, PSD, INCLINOMETERS**



With electronic inclinometers in both measuring units the system knows exactly how they are posi-**TECH** tioned. This also makes it very easy to align uncoupled shafts. The so-called reversed measurement

method with two laser beams and two PSD makes it possible to also measure grossly misaligned machines when the lasers fall outside the measuring range of the detectors. This is particularly good for new installations, where the machines are not yet in the correct position. With the Dual Technology, measurement accuracy is retained even over longer distances.

# SHAFT BRACKETS















- A. Offset bracket, 2 pcs included
- B. Magnetic bracket, Part No. 12-1147\*
- C. Magnet base, 2 pcs included
- D. Sliding bracket, Part No. 12-1010\*
- E. Thin shaft bracket, Width 12 mm [0.5"], Part No. 12-1012\*
- F. DM-bracket. For dynamic measurements. Complete kit with 2 brackets, Part No.12-1130\*
- G. Cardan bracket kit, Part No. 12-1151\* (Note: not all parts included shown on picture.)
- H. Extension rods (not pictured):

Length 30 mm [1.18"], (x1) Part No. 01-0938 Length 75 mm [2.95"], (x4) Part No. 12-1161

Length 120 mm [4.72"], (x8) Part No. 12-0324 Length 240 mm [9.44"], (x4) Part No. 12-0060

\*Accessories

### **DISPLAY UNIT**

#### **XT12 DISPLAY UNIT**

Rugged, robust, industrial grade tablet with wear resistant rubberized protective coating. IP66 and 67, dust- water- and shockproof. As standard a 13 MP camera for documentation is built-in, but you can also choose a model with IR camera added. With this you can shoot a thermal image before and after alignment and include with the documentation!

A large 8", glove-enabled touch-screen makes the information clear and the app easy to use. You can check battery status also when the unit is turned off.

Heavy-duty rechargeable battery for very long operating times; up to 16 hours. Fastening points for shoulder strap (accessory).



- A. Ergonomically, rubber coated housing
- B. Battery status-check button
- C. Battery status indicators
- D. Dust cover and protection for connectors (Note: connectors are dust and waterproof)
- E. Proximity sensor
- F. Display brightness sensor
- G. Large and clear 8" glove-enabled touch-screen
- H. Enter button



- A. Charger
- B. USB C / USB A / AV connector (HDMI)
- C. IR Camera (optional)
- D. 13 Mp Camera
- E. LED Light
- F. Fastening points for shoulder strap (x2)
- G. Loudspeakers



#### THERMAL CAMERA

The Easy-Laser® XT12 can be delivered with a thermal imaging camera (IR) along with the standard 13 MP digital camera. Shoot a thermal image before and after alignment and include with the documentation!




#### 13 MP CAMERA

Take pictures to identify your machines and include with your report.



### LED LIGHT

Light up the work area when ambient light is not enough.

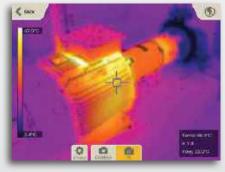



### **AV CONNECTOR**

As standard the XT12 is equipped with a HDMI connector, making it possible to share the display screen direct on a TV monitor or projector screen without any additional software. Useful for training purposes with large groups.

### **PRECISION LEVEL**

#### FOR GENERAL MACHINERY SET-UP

XT290 Digital Precision Level is the musthave addition to your shaft system. Installing machinery level is very often a requirement for them to work as intended. Use

the XT290 as a separate tool, or with the XT Alignment App. When connected to the XT Alignment App on your iOS or Android device, or the XT12 display unit, you can read off the alignment "live" at the position on the machine where the actual alignment is made, and make PDF reports.





Display on Precision

Level unit. Live values

Align in live mode, document result with PDF. (XT Alignment app Values/Level application.)





# **BELT ALIGNMENT TOOL**

#### FOR RADIALLY MOUNTED DRIVES



With the Belt alignment tool XT190 BTA you can align most types of radially mounted drives. The transmitter and detector attaches magnetically to the sheave

edge. A digital display unit gives the advantage of checking against belt manufacturer tolerances.

When connected to the *XT Alignment App* on your iOS or Android device, or the XT12, you can also read off the alignment "live" at the position on the machine where the actual alignment is made. You get adjustment values for both horizontal and vertical direction (shim value), resulting in a more accurate alignment in a shorter time.



0.6 mm 0.35 °H 0.45 °V

OLED display on detector unit. Live values.

Align machine in live mode, document result with PDF. (XT Alignment app Belt application.)

SYSTEM XT190 BTA PART NO. 12-1053





# **VIBROMETER TOOL**

#### FOR QUICK VIBRATION ANALYSIS



Easy-to-use vibration analyser that quickly diagnose vibration level, unbalance, misalignment and looseness. The direct readout of 1×, 2×, 3× RPM, total level as

well as bearing condition provide necessary information during installation and alignment.
The XT280 connects to the XT Alignment App, mak-

The XT280 connects to the XT Alignment App, making it possible to document the result as PDF.



3 6	150						
	1007	300	- Gr (2000)	Sa pressu	25.	RPW	()
1 1.070	8.0	3	0,0	0,0	0.0	1550	*
2 1.006	25	2	10	9.0	1.2	1999	~
3 11.030 2 eestis		3	80	0.0	5.4	7620	7
A. 5109	100	2		,	13	1991	^
							27
	2 1.026 3 0.026 2 eetin	2 1.006 PS 3 0.026 PG 2 entisimado	2 0.006 FS 2 0 0.006 FG 3 2 entisionalog	2 1.036 PE 2 63 2 1.036 PE 2 63	2 1.006 25 2 1.0 40 0 1.006 80 3 0.0 60 2 estimating	2 0.06 25 2 03 04 03 0 0.06 90 9 03 60 54 # settal-mades	2 1356 25 2 63 64 13 580 3 1356 90 3 63 60 54 580 # settlemates

7.5	ISO mm/s
23	0.4
BDU	g

Display on vibrometer unit. Live values.

Register values with notes for each point, add photo of machine, document result with PDF.

# **GEOMETRIC MEASUREMENTS**

### STRAIGHTNESS AND FLATNESS




With XT770 GEO you will be able to measure flatness and straightness according to established standards like ISO and ANSI. Choose between laser transmitter XT20

or XT22. The kit also includes a magnet base with rotatable top for geo measurements.


#### **SMART TECHNOLOGY**

Both transmitters have a 360° rotatable laser head. XT22 can in addition also point the laser beam vertically. Their unique digital precision levels mean the accuracy will not be affected by user interpretation or possible bad work light conditions.


The transmitters connect to the XT Alignment App, making them very easy-to-use. For example you are guided on-screen when calibrating the electronic levels. This makes the procedure easy also for users less experienced of flatness measurement. You can of course also measure with an object as reference instead of the level. The Straightness and Flatness programs then also guide you and make optimized calculations of best-fit for you. Actually, with the Values program you can perform almost any kind of geometrical measurement, although you might need to do some manual calculations.

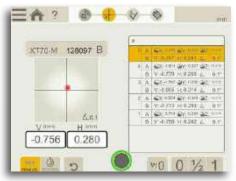

Values program. Gives you absolute values for maximum flexibility.

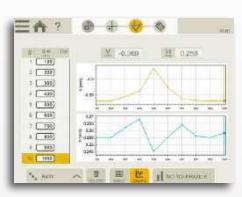

Straightness program. With both H and V values. Add reference points, calculate best-fit, etc.

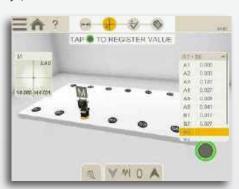

Basic flatness measurement program. Perfect for machine foundations, compressor housings etc.








**XT20 LASER TRANSMITTER** 



XT22 LASER TRANSMITTER

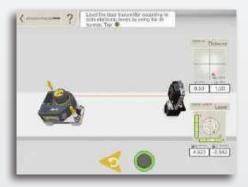

Calibrating the electronic precision levels is super easy with the step-by-step guidance provided by the software.

#### **BORE ALIGNMENT**

The Bore center program is used together with the Bore bracket kit (accessory) and its XT24 laser transmitter. Either you use the XT70-M unit as detector, included with

the XT770 system, or upgrade with the XT9 detector (accessory) to be able to measure smaller diameters. Different brackets can be used depending on the type of job. See next page for Bore bracket kit items.



Bore center program, measuring view.



# **CHOOSE YOUR SYSTEM!**

### **XT**770

**PART NO. 12-1096** 

Weight: 9.1 kg [20.0 lbs] Dimension WxHxD: 460x350x175 mm [18.1x13.8x6.9"]



**XT770** GEO

**WITH XT20, PART NO. 12-1128** 

Weight: 17.0 kg [37.5 lbs]

Dimension WxHxD: 550x430x250 mm [21.6x16.9x9.8"]

WITH XT22, PART NO. 12-1334

Weight: 17.2 kg [37.9 lbs]

Dimension WxHxD: 550x430x250 mm [21.6x16.9x9.8"]









### **BORE BRACKET KIT, WITH XT24, PART NO. 12-1381**

Weight: 10.0 kg [22.0 lbs]

Dimension WxHxD: 460x350x175 mm [18.1x13.8x6.9"]

BORE UPGRADE KIT, WITH XT9, **PART NO. 12-1355** 

Weight: 0.53 kg [1.17 lbs]

#### All Easy-Laser® XT770 systems include:

- Measuring unit XT70-M
- Measuring unit XT70-S
- Shaft brackets with chains and rods 120 mm [4.72"]
- Rods 75 mm [2.95"] 4
- Rods 120 mm [4.72"]
- 2 Magnet bases
- Offset brackets
- Extension chain 900 mm [35.4"]
- Measuring tape 5 m [16.4']
- Hexagon wrench set
- Charger (100-240 V AC)
- DC split cable for charging
- DC to USB adapter, for charging
- Quick reference manual
- Cleaning cloth for optics USB memory with manuals
- Carrying case

#### Part No. 12-1128 and 12-1334 also include:

- 1 Laser transmitter XT20 or XT22
- Magnet base with turnable head (replaces one of the regular magnet bases)
- Rods 120 mm [4.72"]
- Multi-bracket for XT20/XT22

#### Add display unit XT12:

Part No. 12-1292 XT12 with IR Camera

Part No. 12-1291 XT12

Weight: 1400 g [49.4 oz]

Part No. 12-0997 Shoulder strap for XT12 (accessory)

#### Bore bracket kit includes:

- Laser transmitter XT24
- Slide bracket Small
- Slide bracket Medium
- Slide bracket Large
- Axial support for slide brackets
- Set of rods 4x75 mm
- Set of rods 4x120 mm
- Set of rods 4x240 mm
- Offset hub for Laser transmitter
- Arms for offset hub
- Bracket with rotatable bore probe
- Target for detector rough alignment
- Carrying case

#### Bore upgrade kit includes:

- Detector XT9
- Slide bracket 25 mm width
- Rod adapter with built-in target C-C 40 mm
- Rod adapter with built-in target C-C 56 mm

# **TECHNICAL DATA**

Measuring units VT70 M / VT70	n.c
Measuring units XT70-M / XT70 Type of detector	2 axis TruePSD 20x20 mm [0.79x0.79"]
Communication	BT wireless technology
Battery type	Heavy duty Li Ion rechargeable
Operating time	Up to 24 h continuously
Resolution	0.001 mm [0.05 mils]
Measurement accuracy	±1µm ±1%
Measurement range	Up to 20 m [66 feet]
Type of laser	Diode laser
Laser wavelength	630-680 nm
Laser class	Safety class 2
Laser output	<1 mW
Electronic inclinometer	0.1° resolution
Environmental protection	IP class 66 and 67
Operating temperature	-10–50 °C [14–122 °F]
Storage temperature	-20–50 °C [-4–122 °F]
Relative humidity	10–95%
OLED display	128x64 pixels
Housing material	Anodized aluminium + PC/ABS + TPE
Dimensions	WxHxD: 76x76.7x45.9 mm [3.0x3.0x1.8"]
Weight	272 g [9.6 oz]
VT12 Dienlay unit	
XT12 Display unit Type of display/size	8" LCD capacitive multi-touch colour display
	Heavy duty Li Ion rechargeable
Battery type Operating time	Up to 16 h continuously
Connections	USB A, USB C, Charger, AV
Communication	Wireless technology. WiFi
Camera, with LED diode	13 Mp autofocus
IR camera (optional)	FLIR LEPTON® (0–400 °C, 32–752 °F)
Languages	en / de / sv / es / pt / ru / ja / ko / zh / it / fr / pl / fi / tr
Help functions	Built-in manual
Environmental protection	IP66/67. Designed for outdoor use (pollution degree 4)
Operating temperature	-10-50 °C [14-122 °F]
Storage temperature	-20-50 °C [-4-122 °F]
Relative humidity	10–95%
Loudspeakers	Built-in, rear-facing
Charger	15 V
Housing material	PC/TPE or PC/TPU
Dimensions	WxHxD: 269.0x190.0x49.4 mm [10.59x7.48x1.95"]
Weight	1400 g [49.4 oz]
Cable	Levelle day 100 dill
Charging cable (splitter cable)	Length 1 m [39.4"]
Brackets etc.	
Shaft brackets	Type: V-bracket for chain, width 19 mm [0.7"]
Onail Diackets	Type: V-bracket for chain, width 18 mm [0.7"]. Shaft diameters: 20–150 mm [0.8–6.0"]
	With extension chain, diameters up to 450 mm [17.7"]
Rods	Material: anodised aluminium Length: 120 mm, 75 mm [4.72", 2.95"] (extendable)
TIOUS	Material: Stainless steel
	materiali Otalilioso stori
Detector XT9	
Type of detector	2 axis TruePSD 20x20 mm [0.79x0.79"]
Communication	BT Wireless Technology
Battery type	Heavy duty Li Ion rechargeable
Operating time	Up to 15 hours continuously
Resolution	0.001 mm [0.05 mils]
Measurement accuracy	± 1 µm ± 1%
Electronic inclinometers	0.1° resolution
Environmental protection	IP Class 66/67
Operating temperature	-10-50 °C [14-122 °F]
Storage temperature	-20–50 °C [-4–122 °F]
Relative humidity	10–95%
Housing material	Anodized aluminium, PC/ABS
Dimensions	Diameter 44 mm, L=100 mm [Diameter 1.73", L=3.93"]
Dimensions	
Weight (excl. rod adapter)	194 g [6.8 oz]

XT20 and XT22 Laser transmitter	s		
Type of laser	XT20: Diode laser		
I accommonded with	XT22: Fiber-coupled diode laser		
Laser wavelength	630–680 nm		
Laser Safety Class	Class 2		
Output power	< 1 mW		
Beam diameter	XT20: 6 mm [0.24"] at aperture, 10 mm [0.39"] at 20 m [66']		
	XT22: 6 mm [0.24"] at aperture,		
	13 mm [0.51"] at 40 m [132']		
Working range	XT20: 20 m radius [66']		
	XT22: 40 m radius [132']		
Communication	BT Wireless technology		
Warning indications	Tempearature drift and shake/vibration		
Connections	Charger		
Type of battery	Heavy duty Li-lon chargeable		
Operating time	Up to 30 hours continuous use		
Warmup time	15 min		
Operating temperature	-10-50 °C [14-122 °F]		
Charging temperature (battery)	0-50 °C [32-122 °F]		
Storage temperature	-20–50 °C [-4–122 °F]		
Relative humidity	10-95% non-condensing		
Number of precision levels	XT20: 2 pcs Horizontal		
	XT22: 2 pcs Horizontal, 1 pc Vertical		
Precision level range	± 10 mm/m [± 10 mils/inch]		
Precision level accuracy	± 0.02 mm/m ±1% [± 0.02 mils/inch ±1%]		
Precision level sensitivity	0.001 mm/m [0.001 mils/inch]		
Laser plane flatness	± 0.01 mm/m [± 0.01 mils/inch]		
Squareness between laser beams	XT20: N/A		
	XT22: ± 0.01 mm/m [± 0.01 mils/inch]		
Laser head fine turning	XT20: 1:132 gear ratio		
	XT22: 1:1320 gear ratio		
Environmental protection	XT20: IP55, designed for outdoor use (pollution deg. 4)		
	XT22: N/A, designed for industrial use (pollution deg. 3)		
TFT display	240x240 pixels, RGB colour		
Housing material	Anodized aluminium + PC/ABS + TPU		
Dimensions	XT20: WxHxD: 147x126x152 mm [5.79x4.97x5.98"]		
	XT22: WxHxD: 147x136x152 mm [5.79x5.35x5.98"]		
Weight	XT20: 2065 g [72.86 oz]		
	XT22: 2264 g [79.86 oz]		
Laser transmitter XT24 with offse			
Type of laser	Fiber-coupled diode laser		
Laser wavelength	630–680 nm, visible red light		
Laser Safety Class	Class 2		
Output power	< 0.6 mW		
Beam diameter	6 mm [1/4"] at aperture, 13 mm [0.51"] at 40 m [132']		
Working distance	40 m [132']		
Type of battery	Heavy duty Li-lon rechargeable		
Operating time/battery	Up to 24 hours continuous use		
Warmup time	15 min.		
Operating temperature	-10–50 °C [14–122 °F]		
Storage temperature	-20–50 °C [-4–122 °F]		
Relative humidity	10–95% non-condensing		
Straightness of laser beam	±0.001 mm (after best fit operation)		
Laser adjustment on hub	[±0.040 mils] (after best fit operation) Angle: 2 ways ±1.3° (± 23 mm/m)		
Laser adjustilient on hub	Offset: ±5 mm in two axes		
Environmental protection	IP66/67, designed for outdoor use (pollution deg. 4)		
Housing material	Anodized aluminium		

WxHxD: 136x136x166 mm [5.35x5.35x6.53"]

2100 g [74.13 oz]

Housing material

Weight

Dimensions XT24 with Hub



Add extra power to your alignment system

Easy-Laser PLUS™ is our cloud solution where you:

- Collaborate with your maintenance team on job assignments.
- Collect all your team's measurement data in one place for quick overview and analysis.
- Copy your measurement data to a new device if your tablet is lost or damaged.
- Restore accidentally deleted files on your tablet.
- Receive information about the latest software updates.

Simply put, Easy-Laser PLUS™ is your hub for the team's measurement jobs and extra security for your data. But that's not all...

Learn more at easylaser.com!

Easy-Laser® is manufactured by Easy-Laser AB, Alfagatan 6, SE-431 49 Mölndal, Sweden
Tel +46 31 708 63 00, Fax +46 31 708 63 50, e-mail: info@easylaser.com, www.easylaser.com
© 2024 Easy-Laser AB. We reserve the right to make changes without prior notification. Easy-Laser and Easy-Laser
PLUS are registered trademarks of Easy-Laser AB. Android, Google Play, and the Google Play logo are trademarks
of Google Inc. Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S.
and other countries. App Store is a service mark of Apple Inc. Other trademarks belong to their respective owners.
Documentation ID: 05-0914 Rev8









9001 CERTIFIED COMPANY



